


Quick Setup

Before using the projector, make sure you read the safety instructions in the online *User's Guide*.

Choose a location

Keep the projector level and place it at a height so its lens is even with the top or bottom of the screen and is centered horizontally. If this isn't possible, use the keystone correction buttons on the projector to reposition the image (see "Adjust the image").

In order to view 3D images correctly, RF 3D glasses must be worn within 32 feet (10 m) of the projector. Use the image below to determine the viewing distance for 3D projection (the shading represents the 3D viewing area):

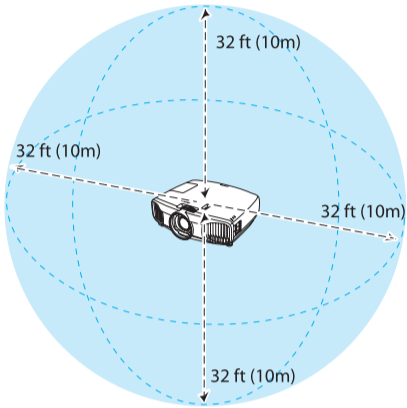


Make sure the Wireless HD Transmitter is also placed within 32 feet (10 m) of the projector. See the online *User's Guide* for more information on where to place your projector.

Connect the projector

Choose from the following connections. For additional connection types, see the online *User's Guide*.


Video device

Connect up to 5 video devices and use the **Source** buttons on the projector or remote control to switch between them.

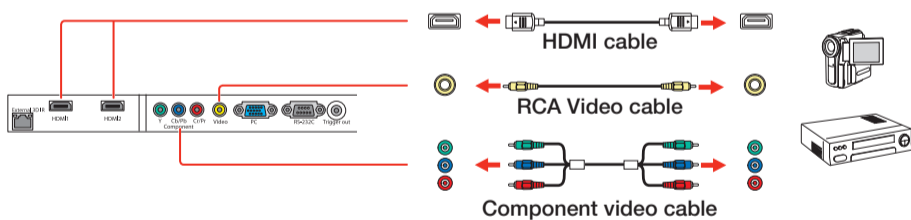

Wireless HD


Follow these steps to set up the included WirelessHD Transmitter.

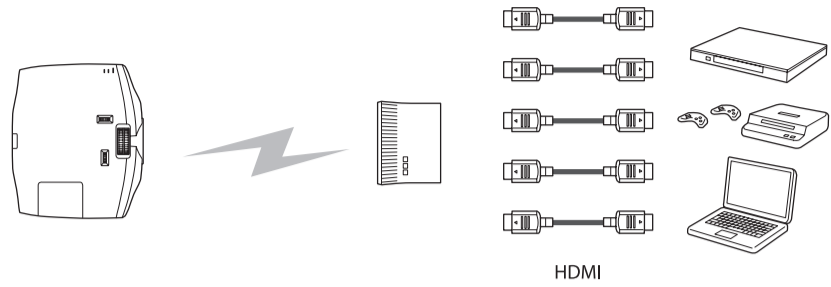


- 1** Place the transmitter within 32 feet (10 m) of the projector. Make sure the front of the transmitter faces the front of the projector. See the online *User's Guide* for more information on the WirelessHD transmission range.

Note: Do not place the transmitter on a metal surface, as this may interfere with the signal. Make sure there are no obstructions between the transmitter and the projector.

- 2** Plug the AC adapter into the transmitter and a wall outlet.

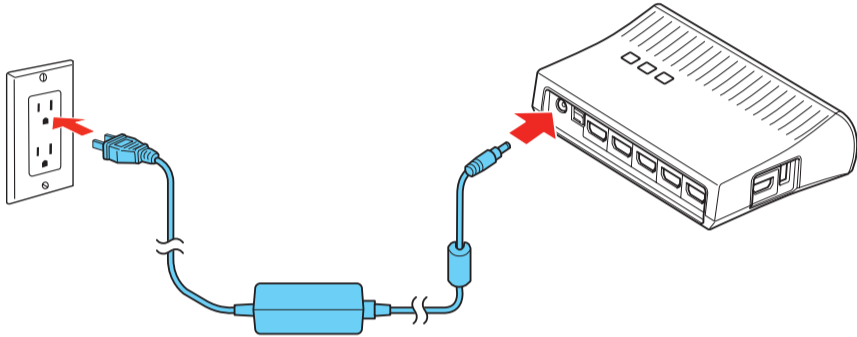


- 3** Connect the HDMI cables to your video input devices and the HDMI ports on the side and back of the WirelessHD Transmitter.

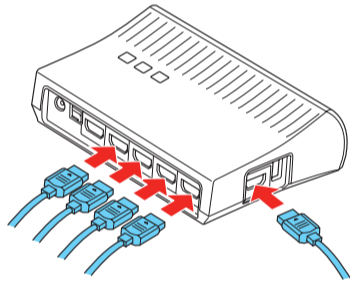


Note: You can connect up to five input devices to the transmitter. See "Viewing WirelessHD content" for information on switching between input sources.

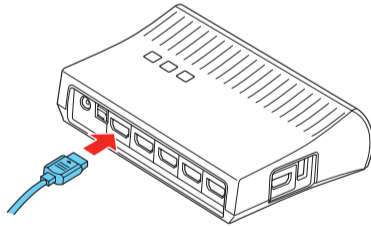

- 4** To use the transmitter as a pass-through device to a television or other display, connect an HDMI cable to the display device and the HDMI output port on the rear of the transmitter. See "Viewing WirelessHD content" for information on switching between wireless and wired display modes.





Turn on your equipment

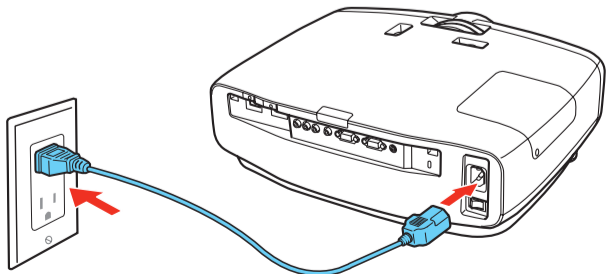- 1** Turn on your video source.
- 2** Plug in the projector.




- Turn on the power switch on the back of the projector. The  power button on the projector turns blue.
- Press the  power button on the projector or the **On** button on the remote control. The power light flashes blue, and then stays on.

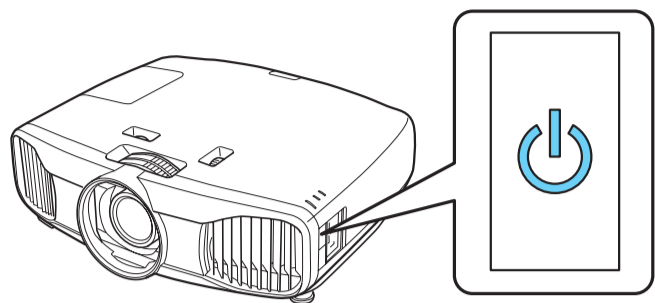

Note: To shut down the projector, press the  power button on the projector twice or the **Standby** button on the remote control, then unplug it. You don't have to wait for the projector to cool down.


- The default language of the menu system is **English**. To select another language, press the **Menu** button on the remote control. Select **Extended** and press **Enter**. Select **Language** and press **Enter**. Select your language and press **Enter**. Press the **Menu** button to exit the menu system.

Adjust the image


- If you don't see an image, press the **Source** buttons on the remote control or the  button on the projector to select the image source.

Note: If you still see a blank screen or have other display problems, see "Troubleshooting."



- Turn the horizontal and vertical lens shift dials to adjust the image position and center it between the top and bottom of the screen.

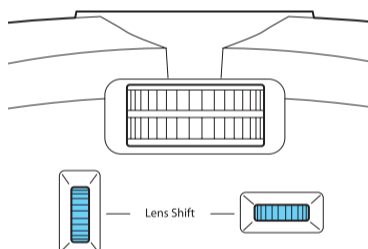


- To raise the image, adjust the front feet as shown below.

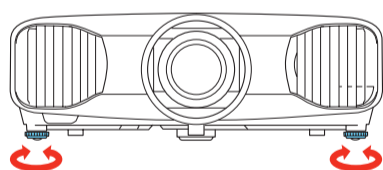



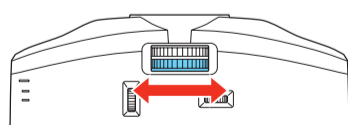 



- Turn the zoom ring to reduce or enlarge the image.

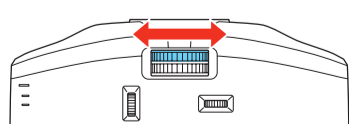



- Turn the focus ring to sharpen the image.

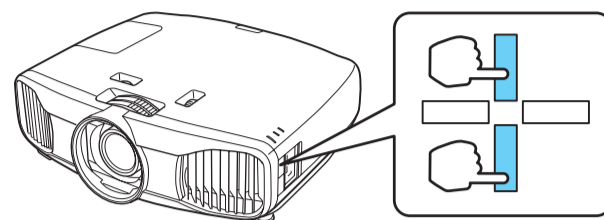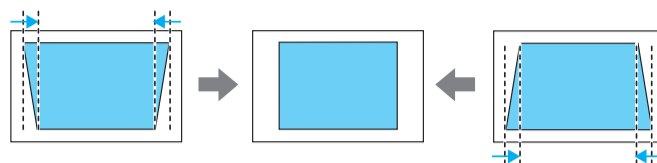



- Your projector automatically adjusts images that look like  or , but if necessary you can press the  or  buttons on the projector to correct this.



Note: When setting up the projector, make sure that it is placed level to the screen in order to provide the best possible image quality. If you must set up the projector at an angle, use the  or  buttons to correct the image shape.

Using the remote control


Make sure the batteries are installed as shown (two AA batteries).

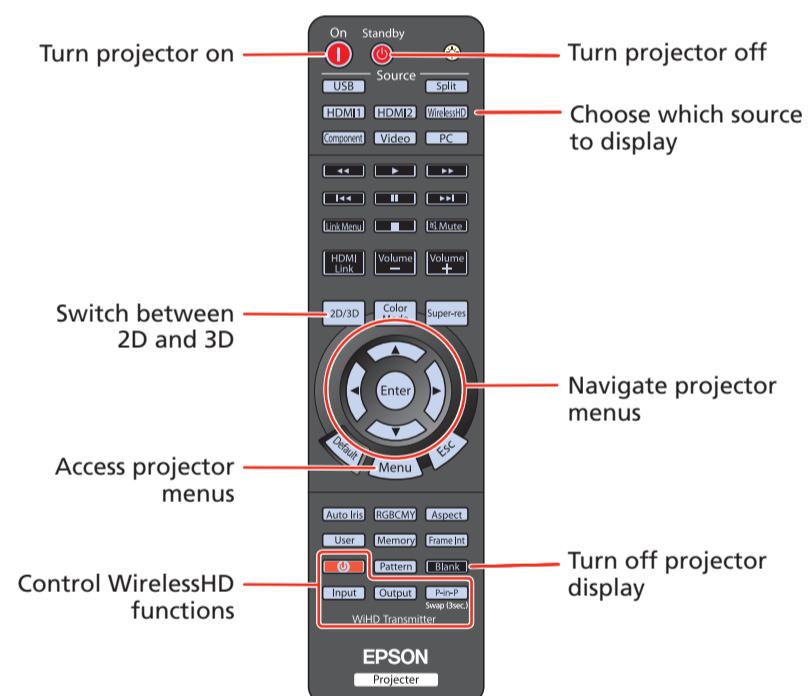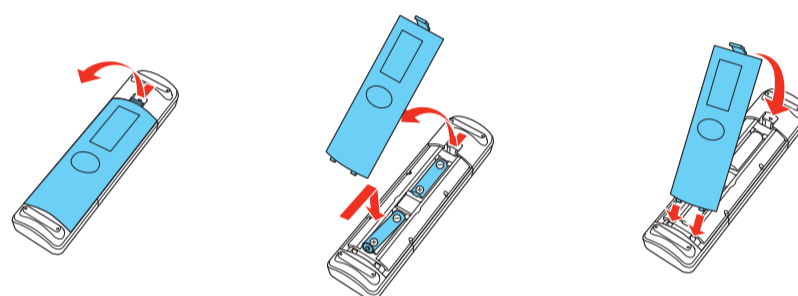


For more information on using the remote control, see the online *User's Guide*.


Viewing 3D images

To view 3D content, you must first connect a 3D-compatible video device to one of the HDMI ports on your projector. You will also need a pair of EPSON or EPSON-compatible RF 3D active shutter glasses.

- 1 Turn on and begin playback on the 3D-compatible video device.
- 2 Press the  button on the projector remote control, if necessary.
- 3 Slide the power switch on your 3D glasses to the **On** position.

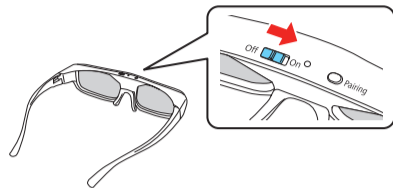

Note: If the glasses don't automatically display 3D content, you may need to pair them with the projector. Move the glasses within 10 feet (3 m) of the projector, then press and hold the **Pairing** button on the 3D glasses for at least 3 seconds. The status light on the glasses will alternately flash green and red, then remain green for 10 seconds if pairing is successful.

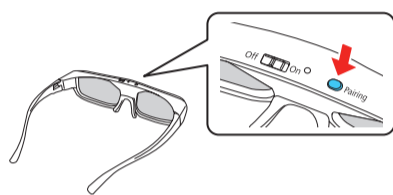


You can also automatically convert 2D HDMI content to 3D. To enable the 2D-to-3D Conversion option, press the **Menu** button on the projector or remote control. Select **Signal** and press **Enter**, then select **3D Setup** and press **Enter**. Select **2D-to-3D Conversion** and press **Enter**. Select the **Weak**, **Medium**, or **Strong** setting, then press **Enter**.

See the online *User's Guide* for more information on adjusting 3D images.

Viewing WirelessHD content

- 1 Turn on your video device and begin playback.
- 2 Turn on the power switch on the side of the WirelessHD Transmitter.
- 3 Turn on the projector.
- 4 If you have connected a television or other display to the output port on the transmitter and want to switch between wired and wireless display modes, press the **Output** button on the remote control or transmitter. The **WiHD** light on the transmitter will light up when the wireless display mode is active.

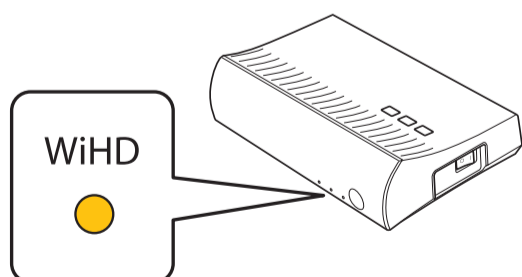

- 5 Press the **WirelessHD** button on the projector remote control.


Note: If the WirelessHD connection fails, press the **Setup** button on the bottom of the transmitter, then try again.

- 6 If you have connected multiple input devices to the transmitter, press the **Input** button on the remote control or transmitter once to display the sub-screen menu, then press the button again to switch between the input devices.
- 7 To display two WirelessHD input devices simultaneously, press the **P-in-P** button on the remote control to enable picture-in-picture mode. Press and hold the **P-in-P** button for three seconds to switch the main image and sub-screen, or press the **P-in-P** button again to disable picture-in-picture mode.


See the online *User's Guide* for more information on adjusting and configuring the WirelessHD connection and display modes.

Troubleshooting

If you see a blank screen or the **No signal** message after turning on your video device or computer, check the following:

- Make sure the power light on the projector is blue and not flashing.
- Press the **Source** buttons on the projector or the remote control to switch to the correct image source, if necessary.
- If you're using a Windows® laptop, press the function key on your keyboard that lets you display on an external monitor. It may be labeled **CRT/LCD** or have an icon such as . You may have to hold down the **Fn** key while pressing it (such as **Fn + F7**). Wait a moment for the display to appear.
- If you're using a Mac laptop, open **System Preferences** and select **Displays**. Select the **VGA Display** or **Color LCD** option if necessary, then click the **Arrange** or **Arrangement** tab, and select the **Mirror Displays** checkbox.

If 3D images aren't displaying properly, check the following:

 - Press the  button to switch to 3D viewing mode, if necessary.
- Make sure that you are within the 3D viewing range. See "Choose a location" on the front of this sheet or the online *User's Guide* for more information.
- Check that your 3D glasses have not entered standby mode. Slide the power switch on the 3D glasses into the **Off** position, then back to the **On** position.
- Press the **Menu** button on your remote control, select the **Signal** menu, then **3D Setup**, then select **3D Format**. Make sure that the **Auto** option is selected.
- Check that your video device and media are both 3D-compatible. Refer to the documentation that came with your video device for more information.

If WirelessHD content isn't displaying properly, check the following:

- Check that the **Link** light on the transmitter is lit. If the light is flashing slowly, the transmitter could not connect with the projector and has entered standby mode. Verify that the projector is turned on and that all cables are properly connected as shown in the "Connect the WirelessHD Transmitter" section.
- Make sure the WirelessHD Transmitter is within 32 feet (10 m) of the projector, isn't obstructed by any large objects and is not placed on a metal surface.
- If you are viewing wireless content, make sure that the **WiHD** light on the transmitter is lit. If it isn't, press the **Output** button on the remote control or transmitter.

Where to get help

Manual

For more information about using the projector, click the icon on your desktop to access the online manual (requires an Internet connection). If you don't have a User's Guide icon, you can install it from the projector CD or go to the Epson website, as described below.

Telephone support services

To use the EPSON® PrivateLine® Support service, call (800) 637-7661. This service is available 6 AM to 8 PM, Pacific Time, Monday through Friday, for the duration of your warranty period.

You may also speak with a support specialist by calling (562) 276-4394 (US) or (905) 709-3839 (Canada), 6 AM to 8 PM, Pacific Time, Monday through Friday, and 7 AM to 4 PM, Pacific Time, Saturday.

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Internet support

Visit **www.epson.com/support** (U.S.) or **www.epson.ca/support** (Canada) for solutions to common problems. You can download utilities and documentation, get FAQs and troubleshooting advice, or e-mail Epson.

Registration

Register today to get product updates, special promotions, and customer-only offers. You can use the CD included with your projector or register online at **www.epson.com/webreg**.

Optional accessories

For a list of optional accessories, see the online *User's Guide*.

You can purchase RF 3D glasses or other accessories from an EPSON authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766). Or you can purchase online at **www.epsonstore.com** (U.S. sales) or **www.epson.ca** (Canadian sales).

